


AANSLUITDIAGRAM ACTUATOR MAST

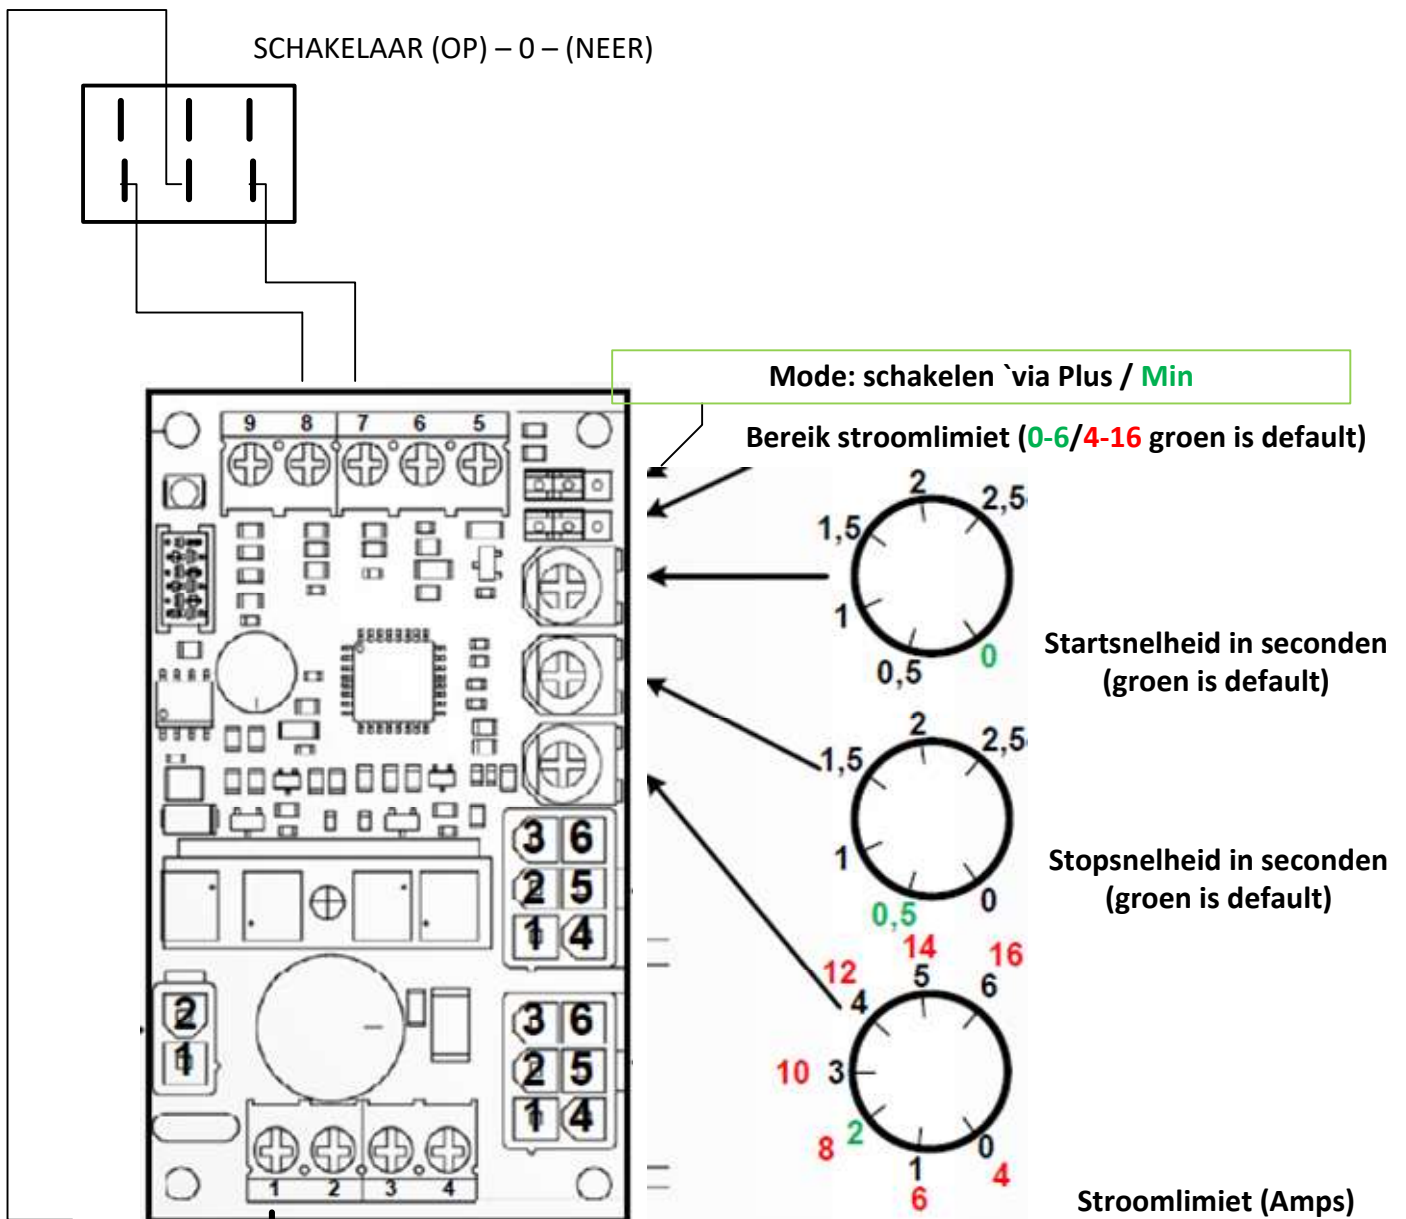

Screw Terminals

- 1 Supply GND
- 2 Supply + (10-35 VDC) fuse required
- 3 Actuator -
- 4 Actuator +
- 5 +5 V output for control-use max. 10 mA load
- 6 Fault in- and output
- 7 Reverse (Rev/In) signal input (0,5 mA)
- 8 Forward (Fwd/Out) signal input (0,5mA)
- 7+8 Used to activate the actuator reverse and forward. Please refer to description of 'Control mode' on page 3
- 9 GND for control-use (not to be used as supply input)